


# Schonell App: Widget Guide

The schonell app widget function lets you unlock your door or gate with a single tap from anywhere: directly from your home screen, without even opening the app.

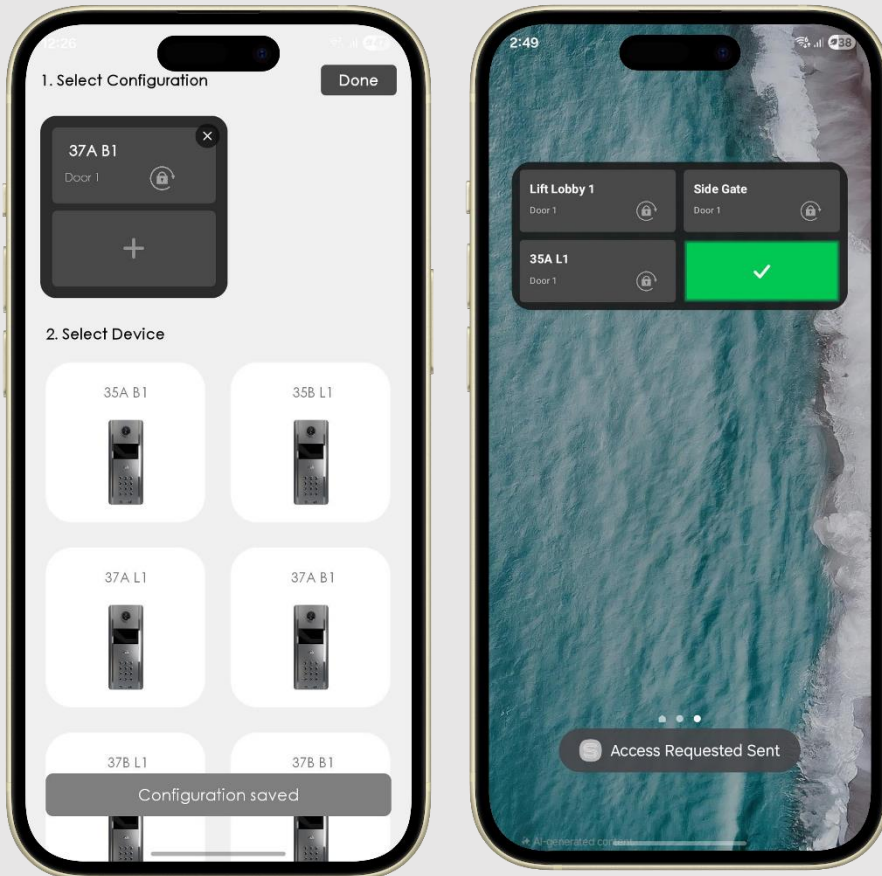

Difficulty Level: ★☆☆☆☆  
Time required: 2-3 Minutes

## Step 1: Add Widget

### Enter Home Screen Edit Mode

Press and hold any empty space on your home screen until icons jiggle (iOS), or widget option appears (Android)

### Find the Schonell Widget

Tap "edit", select add widget (iOS), tap widget (Android), search for "Interphone", then select a size: 1x, 2x, or 4x.

## Step 2: Configure Device

### Assign Your Entrance

A configuration screen opens. Tap + to assign an entrance to each slot, then select your entrance from the list (e.g. "L1 — Door 1").

### Repeat for Each Entrance

Repeat for each additional entrance. "Configuration saved" confirms each one. Tap × to remove a slot.

### Tap "Done" to Save

Your widget is now live with each configured entrance and its unlock button.

## All Done!

### Tap the Lock Icon to Unlock

Tap the lock icon next to any entrance on the widget to unlock instantly.

To reconfigure later: long-press the widget and select "Edit Widget" (iOS) or "Settings" (Android).

#### IMPORTANT NOTES

- You must be logged into the Schonell app for the widget to work.
  - An internet connection (Wi-Fi or mobile data) is required.
- Ensure you are authorised to access the entrance before tapping unlock.